



MANHOLE APPLICATION

INSTALLATION NOTES:

1. Clean casting frame, riser rings and cone section. Spray primer to areas where attaching non-hardening butyl mastic.
2. Install the Infi-shield External Seal on the outside surface of the adjustment ring area covering all grade rings. Remove protective tape and fold back on to the structure.
3. Using a rubber hammer, tap the sealing surface area.
4. Ensure lid and casting is clean. Attach inspection tab and backfill.
5. Contact Sealing Systems Inc. for additional installation instructions @ 800-478-2054.



TOWN of CLAYTON

USE WITH THE TOWN of CLAYTON STANDARD SPECIFICATIONS ONLY

INFI-SHIELD EXTERNAL SEALING DETAIL

SCALE: Not To Scale	DETAIL # 2532.11
REVISION DATE: July, 2010	SHEET #: 1 of 1